

# REVERSIBLE PATTERNS HANGING INSTRUCTIONS




## PLEASE READ BEFORE USING:

**IF, AFTER APPLYING THREE (3) STRIPS, THERE IS SOME QUESTION OF APPEARANCE, STOP AND CONTACT YOUR CUSTOMER SERVICE REPRESENTATIVE.**

**KOROSEAL PRODUCT WARRANTY COVERAGE IS SUBJECT TO THE CONDITION THAT THE PRODUCTS ARE INSTALLED IN STRICT ACCORDANCE WITH THESE INSTALLATION INSTRUCTIONS.**

If you have any questions about the proper installation of this product, please call your sales consultant before proceeding.

**PREPARATION OF GOODS** - Examine goods to ensure that pattern, color, and quantity are as specified. Separate goods by shade lot number. Install in roll number starting from highest number to lowest.

<p>31492155033 ← <b>KOROSEAL</b></p>  <p>KIP46910 JESTER-1 DATE 04/10/25 WEIGHT PIECES/ROLL YARDAGE 30 LENGTH/PIECE</p> <p>LOT W211529 ROLL -264</p> <p>1141135001</p> <p>S/M TAG-WC-1001 NEW GRAND ROOM REMODEL BATHROOM WALLCOVERING SPECI 24919-#256 LIN YDS ATTIC STOCK F&amp;K2001</p>	<p>ITEM NUMBER</p> <p>NAME AND DESCRIPTION</p> <p>SHADELOT (WORK ORDER)</p> <p>ROLL NUMBER (MASTER ROLL IF NECESSARY)</p> <p>YARDS, NUMBER OF PIECES IF NECESSARY</p> <p>SIDEMARK</p>
--	---

**PREPARATION OF SURFACE** - Surfaces must be clean, smooth, dry, and structurally sound. Remove loose paint and/or other surface contaminants. To ensure an acceptable installation, nail heads, nicks, gouges, and other surface imperfections should be taped, bedded, and sanded smooth.

Walls should be checked with a "moisture meter" and should not exceed 4%. Any mildew MUST be removed from the walls and be treated to inhibit further growth. Referring to the EPA website for guidelines on removing mold at [epa.gov](http://epa.gov). These standards MUST be followed.

Wallcovering can be installed over almost any surface which has been properly prepared. Do not hang wallcovering over ballpoint pen writing, wax crayon, ink marker, oil-based stains, or any foreign matter that may bleed through the wallcovering. Use a stain blocking primer. It is suggested that a pencil be used to mark wallcovering or walls, as pencil marks do not bleed.

Glossy surfaces should either be sanded to dull the surface, or primed.

On new drywall, if future strippability is desired and no primer is specified, use a quality clay based strippable wallcovering adhesive.

TYPE II: Koroseal recommends clay base paste for the best performance.

TYPE III: Koroseal recommends heavy duty clay base paste for the best performance. Paste the wall, let dry and paste material and hang for best results


Koroseal does not recommended using strippable clear on commercial grade wall coverings.

Use Acrylic wallpaper primers, do not use oil base Alkyd primer.

Primer plays a crucial role in creating a stable and even base for wallcovering and must be applied.

For recommendations regarding adhesives & primers, visit list on [koroseal.com](http://koroseal.com) "Koroseals Recommended Primers & Adhesives"

**APPLICATION OF WALLCOVERING** - Every other strip of the wallcovering should be reversed in order to ensure color uniformity.

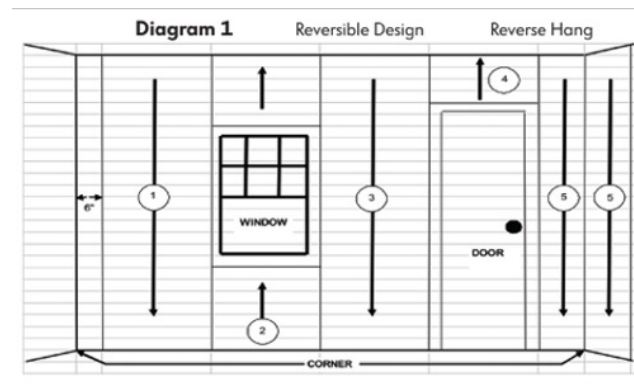

Only full widths of material should be used for the most satisfactory installation.

Piecing or hanging headers with strips cut out of sequence can cause shading at the seams. Overlapping and double-cutting, and pre-trimming the wallcovering both have advantages in making acceptable seams. Be careful not to score the drywall when double cutting.

Apply an even coat of adhesive to the fabric side of the material using a stiff bristle brush, a roller, or a pasting machine in accordance with manufacturer's label.

Smooth the surface, working out air bubbles as you go using a stiff bristle smoothing brush or a plastic smoothing tool. As each strip is installed, immediately remove excess adhesive from the wallcovering surface using a natural sponge and a soft bristle brush frequently rinsed in clean warm water. Dry with a clean (microfiber) towel. A professional wallcovering cleaner/ wallpaper remover should be used where adhesive has dried.

# REVERSIBLE PATTERNS HANGING INSTRUCTIONS



---

Adhesive residue not cleaned promptly from the surface of the wallcovering will be difficult to remove and may discolor or leave a dull area at the seam.

Vertical joints should not occur less than 6" from outside and inside corners.

Do not install wallcoverings unless a temperature above 55°F is maintained in both areas of installation and storage. Permanent building lights must be available for installation.

### **IMPORTANT: Non-Woven Backing**

It is a very absorbing backing that may require additional paste if you're pasting multiple sheets at a time. The booking time does not last as long as woven back materials. It is an ideal method for nonwovens to paste a few sheets at a time and install.

**We are not responsible for the appearance and performance of wallcovering, not applied according to these instructions.**

### **CUSTOMER DUTY TO INSPECT GOODS ON DELIVERY:**

**Reports of damage must be made within 3 DAYS of delivery because all the common carriers will decline a damage claim if it is not made within reasonable time.**

**Customer must inspect all items on delivery to make sure they are complete and free from damage. If visible damaged is evident must sign for it damaged with the carrier at time of delivery.**